




**PD**  
DISINFECTION POINT

[www.hs-solutions.eu](http://www.hs-solutions.eu)

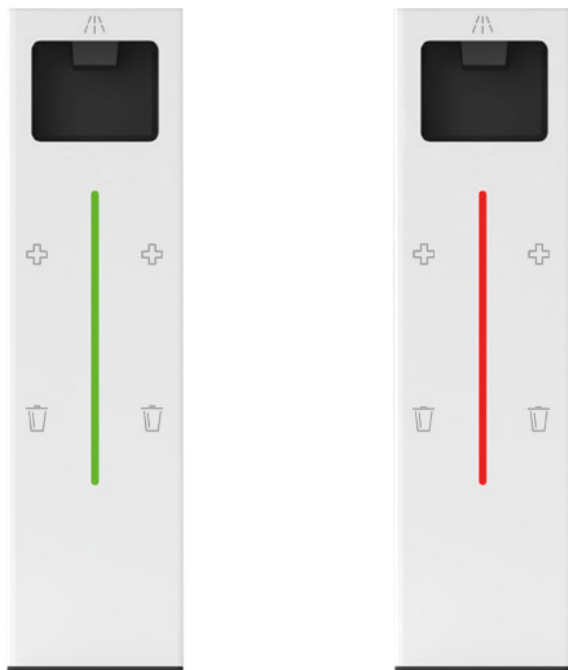

## PD | Disinfection point

[www.hs-solutions.eu](http://www.hs-solutions.eu)

**PD** disinfection point is one of the elements of **HS-Solutions** line of products that is designed and manufactured in Europe.



**Disinfection point** enables disinfection and distribution of personal protective equipment, such as masks and gloves.

The point has a legible marking which makes it very intuitive to operate.

### Operating principle

**PD** enables touch-free hand disinfection by placing them in a marked space.

Disinfection is automatic thanks to an embedded dispenser which has a built-in sensor. Additionally the disinfection point has containers for hygienic accessories which enable their quick distribution.

### Possible device integration

**Disinfection point** can be integrated with **TCM** module, which using precise thermal camera, the embedded **TCM** module takes a measurement of a human body temperature. Operating the device is intuitive. Directions displayed on the screen lead the user through the whole process.

Find out more at: [www.hs-solutions.eu](http://www.hs-solutions.eu)

## DEVICE EQUIPMENT

Automatic dispenser

Containers for hygienic accessories (gloves, masks)

A bin for used hygienic materials

230V/5A power supply with a connector and wiring

The product **does not contain** hygienic materials.

## DIMENSIONS OF THE DEVICE

**Height:** 1235 mm


**Width:** 265 mm

**Base:** 265 x 335 mm

**Power supply:** 12V/5A

**Weight:** 30 kg

**Package weight:** 33 kg

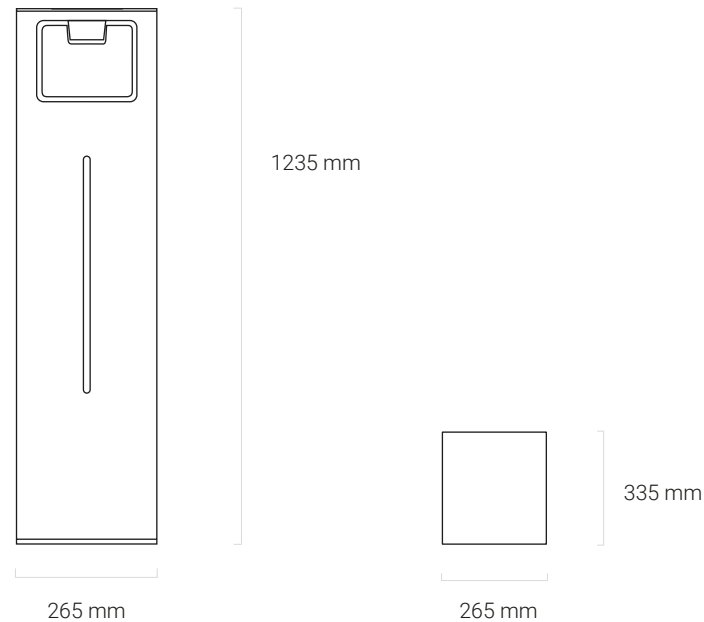



## PD | Disinfection point

[www.hs-solutions.eu](http://www.hs-solutions.eu)

## PD FEATURES

01

**Automatic dispenser**

The dispenser is used for safe application of disinfectants. It is a practical device that guarantees maximum hygiene during use.

02

**Containers for sanitary products**

Thanks to equipping the disinfection point in containers, it is possible to quickly collect masks and gloves.

**ADDITIONAL FEATURES**

**Disinfection point** can be additionally equipped with **TCM module**, which using precise thermal camera, takes a measurement of a human body temperature and safely informs the users about high temperature and next steps that should be taken in these circumstances.

**INTENDED USE**

Only to be used inside buildings.

**MAINTENANCE**

Wipe the disinfection point with a clean, wet cloth.

### THE OPERATING MODULE

PD combined with the **TCP POINT** can be additionally equipped with remote control function and **monitoring** from the reception or security point with integrated intercom, using the operating module.

This solution will allow the operator to keep a safe distance from the examined person, thereby reducing the risk of cross-contamination.

### SMART SOLUTION

Thanks to the use of **Smart No-Touch** technology, **TCP** enables quick and precise touch free control of human body temperature, up to **a few hundred people per hour**.

Additional integration with the operating module will allow remote management of **4 devices at the same time**, creating an integrated temperature control.

